

## INDMAR MAINTENANCE GUIDE

Item	Service	10-20 Hours	Every 25 Hours	Every 50 Hours	Every 100 Hours
Engine Oil & Filter	Change	X	X	X	Hours
ZF Transmission Fluid	Change	X	Λ		
Walters V-Drive Oil	Change	X			
Indmar V-Drive Fluid	Change	X			
Engine Coolant	Check/ Change	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \			
Spark Plugs*	Inspect/Clean				
Fuel Injectors*	Inspect/Clean				
Fuel Filter	Replace				
Flame Arrestor	Clean/Change				Х
Belts	Inspect	Х			Х
Shaft Alignment	Check	Х			
Spark Plug Wires*	Inspect				
Raw Water Pump	Inspect				Х
Impeller					
Breather Hose*	Clean				
Starter Bendix*	Grease			Х	
Heat Exchanger	Inspect/Clean				
Zinc Anodes	Inspect			Χ	